



VKPC 88843/88850/88855

Tehnički bilten – listopad 2011.

VKPC 88843
VKPC 88850
VKPC 88855



MERCEDES



Savjeti za montažu



OE #: 611 200 11 01
611 200 12 01
646 200 03 01


PROIZVOĐAČ	GLAVNI MODEL	GLAVNI MOTOR
MERCEDES	C-Class CLK E-Class M-Class	C 200/220/270 CDI CLK 270 CDI E 220/220/270 CDI ML 270 CDI

Detaljne informacije potražite u najnovijem SKF-ovom katalogu.


Da biste u skladu s konstrukcijom vodene pumpe montirali VKM 31041 pomoćnu remenicu, potrebno je u kućištu pumpe narezati navoj.

Taj se postupak za dolje navedene vodene pumpe možete obaviti na radnom pultu ili izravno na vozilu:


VKPC 88843

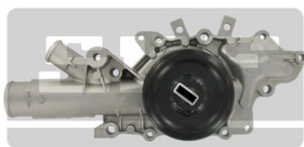

VKPC 88850

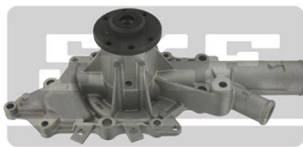

VKPC 88855

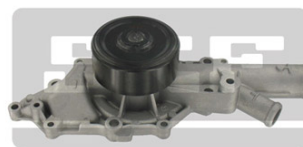



VKPC 88843/88850/88855

Tehnički bilten – listopad 2011.

VKPC 88843
VKPC 88850
VKPC 88855



- 1) Pritegnite vijak pomoćne remenice. Za to nije nužno upotrijebiti novi vijak.



- 2) Navoj očistite komprimiranim zrakom.



- 3) Montirajte novu VKM 31041 pomoćnu remenicu. Pritegnite je momentom prema preporuci proizvođača vozila.

